

# STUDIO•M

SM251082

Please consult your electrician for hanging fixture and wiring.

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Install mounting bracket to electrical box
3. Wire input wires of driver transformer on fixture to wires in outlet box.
4. Connect copper ground wire to ground wire in electrical box.
5. Install fixture to bracket and tighten nuts so that fixture is secure

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P

Leviton IPL06-10Z

Leviton 6674-POW

**Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.**

# STUDIO•M

SM251082

Please consult your electrician for hanging fixture and wiring.

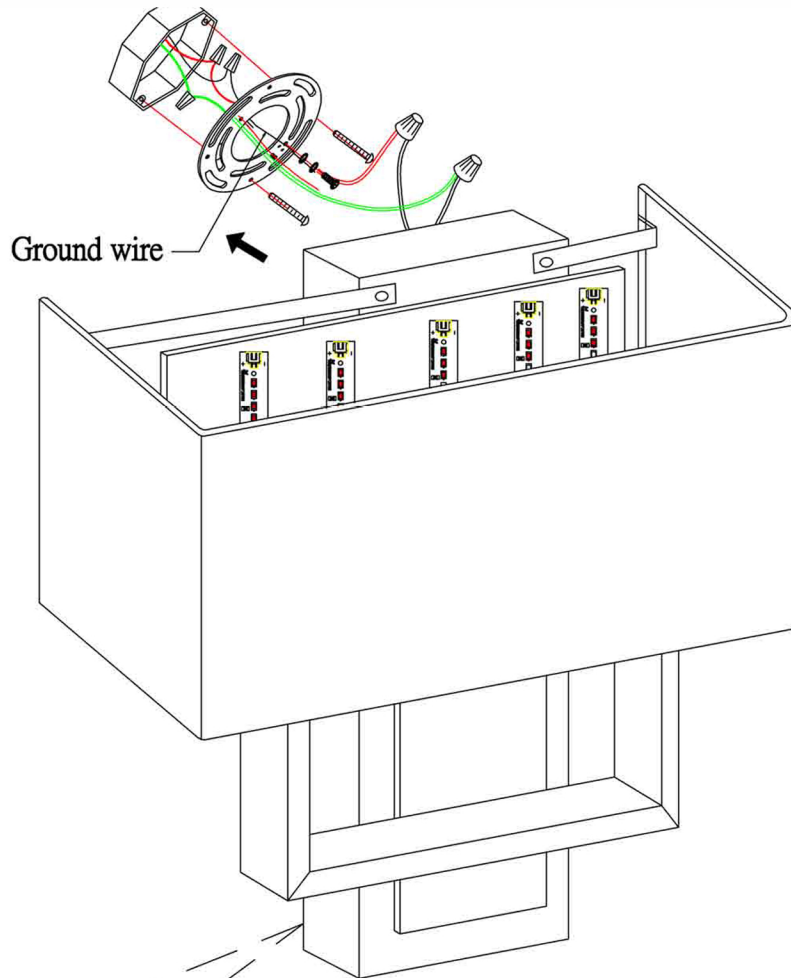


Diagram A

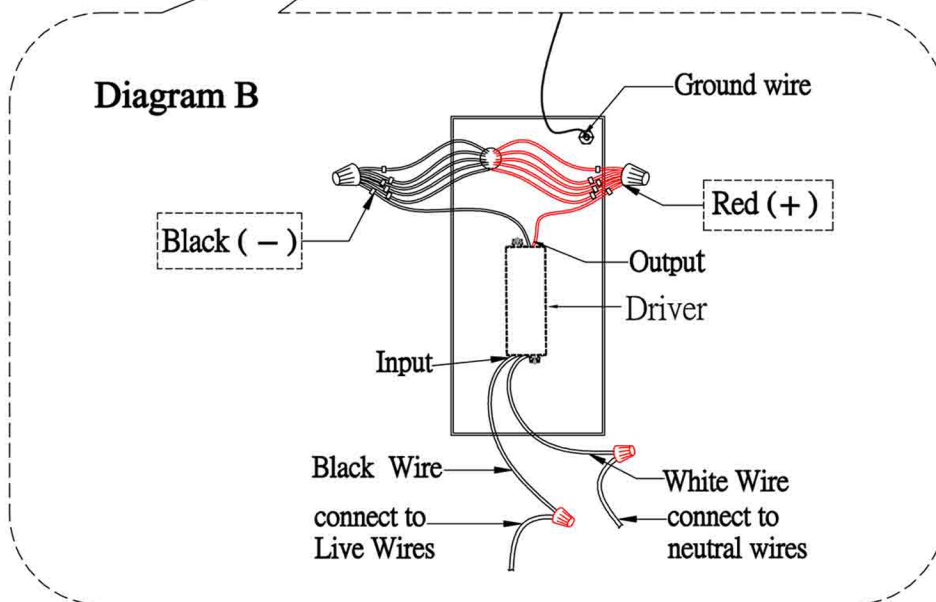


Diagram B